



### WARNING: CHOKING HAZARD


Contains small parts and functional/sharp points.  
Not for children under 4 years old.  
Adult supervision required.




# BOOKWORM BOOKENDS

Made in Chonburi, Thailand exclusively for The Home Depot by Houseworks, Ltd  
2388 Pleasantdale Road, Atlanta, GA 30340 · batch #171110 · date: 04/18

## Contents:

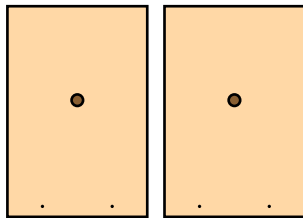


2 Ends



2 Bases



2 Dowels

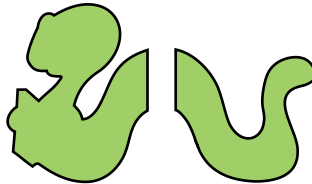

2 Bookworm Shapes

1 Sticker Sheet



4 Nails




## ALSO NEEDED:


- Safety Goggles
- Fine Sandpaper
- Wood Glue
- Hammer

## Assembly:


Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

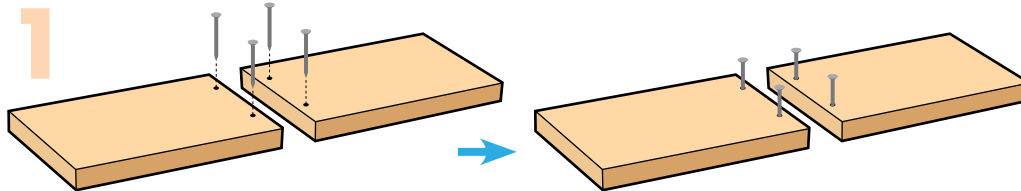

**Step 1**—Place both end pieces flat with the dowel holes down. Start 4 nails.

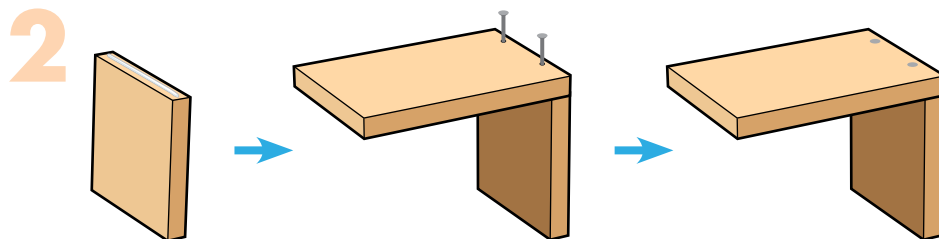

**Step 2**—Stand one base piece up. Add a line of glue to the top edge. Place one of the end pieces on top. Make sure outside edges are even. Finish nailing. Repeat to attach the other end piece and base piece.

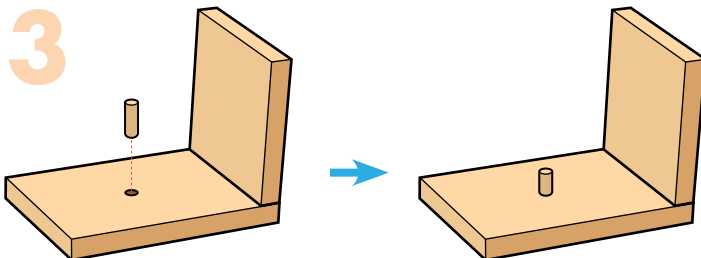


**Step 3**—Add a tiny dot of glue inside the dowel holes. Push the dowels into the dowel holes.

**Attention:** If you are painting the project, paint and wait to dry completely before adding the bookworm shapes.

## 4

**Step 4**—Add the stickers to the bookworm shapes. Push the holes in the back of the bookworm shapes onto the dowels.

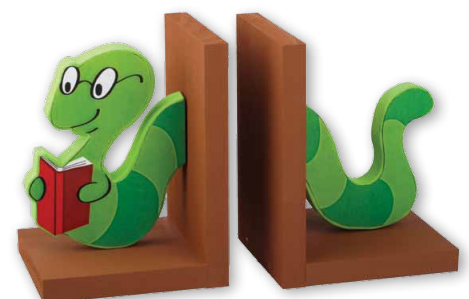

(Ver el dorso para instrucciones en español.)